

## To BYPASS a zone if alarm won't set (DSC - LCD Codepad)

If the alarm will not set and is not showing a green ready light  
Check for an open zone:

1. Press **\*1** to enter the function menu  
(put in user code, if required)
2. Use the **< >** keys to find the zone to be bypassed  
Look for an **O** to the right of the zone name/number
3. Press **\*** to select the zone  
The **O** will be replaced with a **B** (Bypass)
4. Press **#** to exit the bypassing mode  
The green light should show ready to set system