

To BYPASS a zone if alarm won't set (DSC - LED Codepad)

If the alarm will not set and is not showing a green ready light
Check for an open zone (zone light showing):

1. Press ***1** to enter the function menu
2. Enter the 2-digit number of the zone showing (that needs to be bypassed)
Zone light will light up
3. If a zone is bypassed by mistake
-press that number again and zone light will turn off
4. Press **#** to exit the bypassing mode
The green light should show ready to set system
5. Enter code to set system